

Data Sheet

# SSM Floor Heating Manifold

## Application



The SSM manifold is used for controlling water flow in under floor heating systems. Each tube of the floor heating system is connected to the manifold, thus making it possible to control water flow or heat supply to each room in the building individually.

The manifold consists of a supply and return manifold. The supply manifold includes possibility for individual shut-off of each circuit on flowmeter or shut-off valve. The return manifold is equipped with integrated Danfoss presetting valves securing optimal hydraulic balance in the system.

The valves can be controlled electronically by thermal actuators or act as self-acting units by means of remote temperature adjusters.








The manifold is supplied in modules of up to 12 outlets. Ball valves are available as an option for positive shut-off between manifold and system.

The SSM manifold is supplied with a manual airvent and a purge valve.

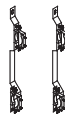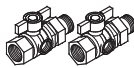

## Ordering

Description	Type	Code no.
	Manifold set 2+2, with flowmeter	SSM-2F <b>088U0752</b>
	Manifold set 3+3, with flowmeter	SSM-3F <b>088U0753</b>
	Manifold set 4+4, with flowmeter	SSM-4F <b>088U0754</b>
	Manifold set 5+5, with flowmeter	SSM-5F <b>088U0755</b>
	Manifold set 6+6, with flowmeter	SSM-6F <b>088U0756</b>
	Manifold set 7+7, with flowmeter	SSM-7F <b>088U0757</b>
	Manifold set 8+8, with flowmeter	SSM-8F <b>088U0758</b>
	Manifold set 9+9, with flowmeter	SSM-9F <b>088U0759</b>
	Manifold set 10+10, with flowmeter	SSM-10F <b>088U0760</b>
	Manifold set 11+11, with flowmeter	SSM-11F <b>088U0761</b>
	Manifold set 12+12, with flowmeter	SSM-12F <b>088U0762</b>
		Manifold set 2+2
Manifold set 3+3		SSM-3 <b>088U0803</b>
Manifold set 4+4		SSM-4 <b>088U0804</b>
Manifold set 5+5		SSM-5 <b>088U0805</b>
Manifold set 6+6		SSM-6 <b>088U0806</b>
Manifold set 7+7		SSM-7 <b>088U0807</b>
Manifold set 8+8		SSM-8 <b>088U0808</b>
Manifold set 9+9		SSM-9 <b>088U0809</b>
Manifold set 10+10		SSM-10 <b>088U0810</b>
Manifold set 11+11		SSM-11 <b>088U0811</b>
Manifold set 12+12		SSM-12 <b>088U0812</b>

Accessories

Description	Type	Code no.
 <p>Mounting brackets - set</p>	FHF-MB	<b>088U0585</b>
 <p>2 x ball valve 1" - for connection to manifold and for blocking of floor heating system</p>	FHF-BV	<b>088U0586</b>
 <p>1 x thermometer 0-60°C Ø35mm - for flow/return temperature measurement</p>	FHD-T	<b>088U0029</b>
 <p>Union, 1"</p>	-	<b>088U0820</b>
 <p>Thermal actuator, 24V, NC, Danfoss RA connection to valve</p>	TWA-A	<b>088H3110</b>
 <p>Thermal actuator, 230V, NC, Danfoss RA connection to valve</p>	TWA-A	<b>088H3112</b>
 <p>Thermal actuator, 24V, NC, with end switch, Danfoss RA connection to valve</p>	TWA-A	<b>088H3114</b>

Compression fittings

Description	Type	Code no.
 <p>Compression fittings for <b>PEX</b> tubing in accordance with ISO 15875.</p> <p>Max working pressure: 6 bar Test pressure: 10 bar Max. flow temperature: 95 °C G ¾" internal thread</p> <p>Max. flow temperature given by the tube manufacturer must not be exceeded.</p>	12x2 mm	<b>013G4152</b>
	13x2 mm	<b>013G4153</b>
	14x2 mm	<b>013G4154</b>
	15x2.5 mm	<b>013G4155</b>
	16x1.5 mm	<b>013G4157</b>
	16x2 mm	<b>013G4156<sup>1)</sup></b>
	16x2.2 mm	<b>013G4163</b>
	17x2 mm	<b>013G4162</b>
	18x2 mm	<b>013G4158</b>
	18x2.5 mm	<b>013G4159</b>
	20x2 mm	<b>013G4160</b>
	20x2.25 mm	<b>013G4093<sup>1)</sup></b>
20x2.5 mm	<b>013G4161</b>	
 <p>Compression fittings for <b>ALUPEX</b> tubing.</p> <p>Max working pressure: 6 bar Test pressure: 10 bar Max flow temperature: 95 °C G ¾" internal thread</p> <p>Max flow temperature given by the tube manufacturer must not be exceeded.</p>	12x2 mm	<b>013G4182</b>
	14x2 mm	<b>013G4184</b>
	15x2.5 mm	<b>013G4185</b>
	16x2 mm	<b>013G4186<sup>2)</sup></b>
	16x2.25 mm	<b>013G4187</b>
	18x2 mm	<b>013G4188</b>
	20x2 mm	<b>013G4190</b>
	20x2.25 mm	<b>013G4093<sup>2)</sup></b>
	20x2.5 mm	<b>013G4191</b>

<sup>1)</sup> Compression fittings also suitable for **PERT** tubing in accordance with ISO 15875.

<sup>2)</sup> Compression fittings also suitable for **PERT/ALU/PERT** tubing.



**Capacity/commissioning**

The pre-setting of the manifold valves determines the flow in the floor heating tubes and is therefore an important factor for obtaining optimal hydraulic balance in the system.

A correct hydraulic balance is important if optimal comfort shall be achieved with a minimum of energy consumption and is easily carried out following the example shown below.

**Example**


Room 1:	1. Determine longest tube/largest room	25 m <sup>2</sup>
	2. Desired cooling (ΔT)	5° C (typical)
	3. Determine heat requirement for the room	50 W/m <sup>2</sup>
	4. Conversion factor	1.16
	5. Calculation of flow for the room	$Q \text{ (l/h)} = \frac{50 \text{ W/m}^2 \times 25 \text{ m}^2}{5^\circ \text{ C} \times 1.16} = 216 \text{ l/h}$
Room 2:	6. Determine area for the next room	15 m <sup>2</sup>
	7. Calculation of flow for the room (ΔT and heat requirement is assumed identical for the rooms in this case)	$Q \text{ (l/h)} = \frac{50 \text{ W/m}^2 \times 15 \text{ m}^2}{5^\circ \text{ C} \times 1.16} = 129 \text{ l/h}$

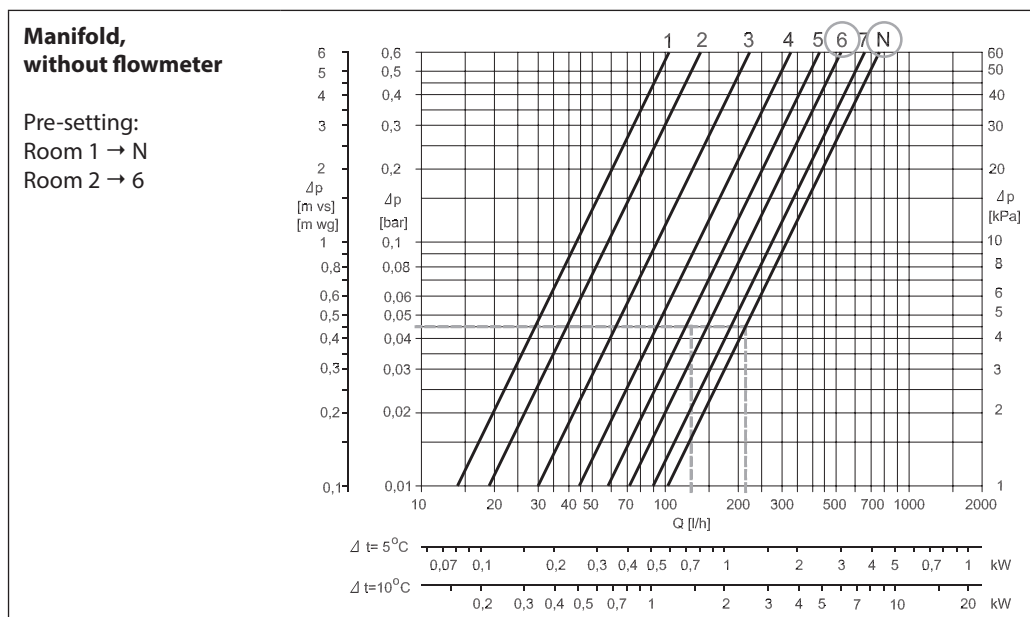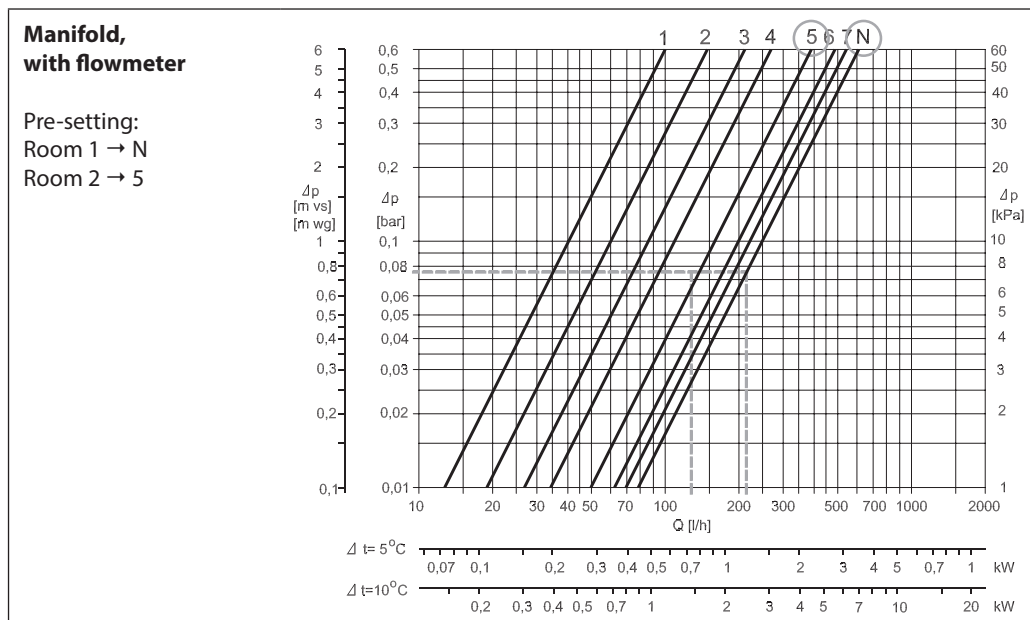

**Presetting the manifold valves**

The diagram shows the capacities for each heating circuit at different presettings of the manifold valves.  
Based on the above calculations and capacity


diagram each manifold valve is preset by rotating the red ring until the correct value on the ring is in-line with the sight mark on the valve.

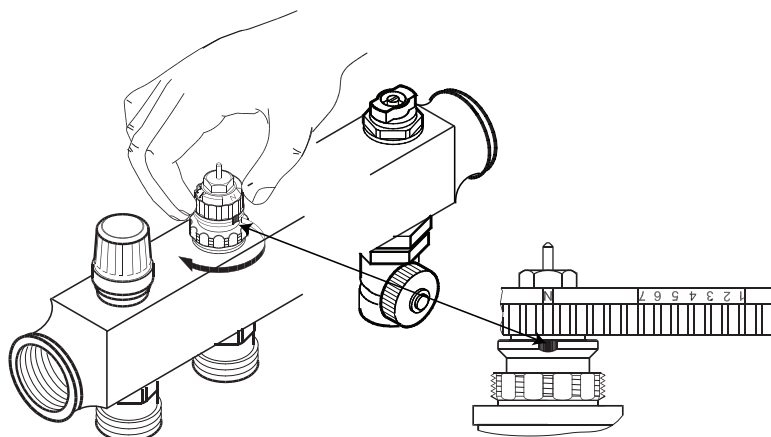


**Operation conditions**

	Supply manifold with flowmeter	Supply manifold without flowmeter
Max differential pressure	0.6 bar	0.6 bar
Max working pressure	6 bar	10 bar
Max test pressure	10 bar	16 bar
Max flow temperature	90° C	90° C

**System layout**

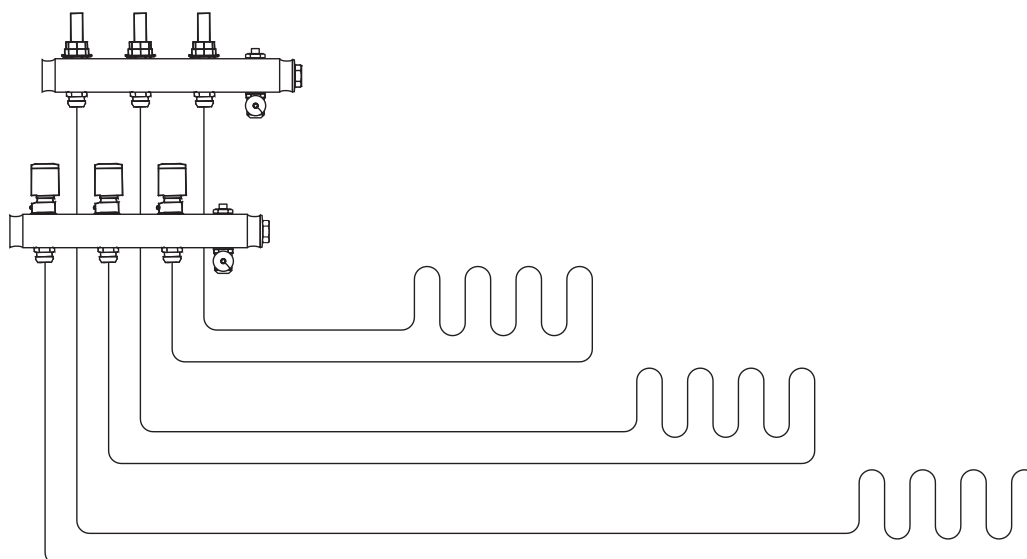

Dimensions

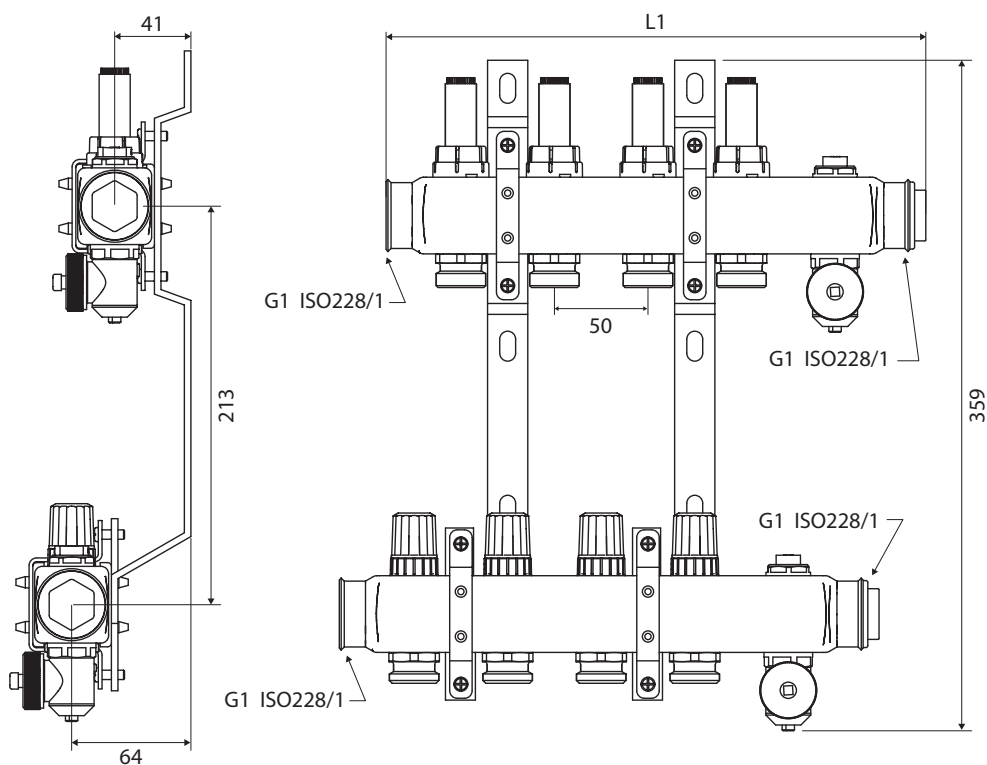

Type	2+2	3+3	4+4	5+5	6+6	7+7	8+8	9+9	10+10	11+11	12+12
L1 (mm)	190	240	290	340	390	440	490	540	590	640	690

ENGINEERING  
TOMORROW



**Danfoss A/S**

Floor Heating Hydronics • Ulvehavevej 61 • DK-7100 Vejle • Denmark • Phone: +45 7488 8500 • Fax: +45 7488 8501  
heating@danfoss.com • [www.floorheating.danfoss.com](http://www.floorheating.danfoss.com)

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed.  
All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.