



# MOUNTING INSTRUCTIONS FOR TKM

## ASENNUSOHJE TKM

## MONTERINGSANVISNING FÖR TKM

**①**

84,0

118,0

**③**

PZ2/1x5  
16mm<sup>2</sup> Cu  
Torque  
1,8Nm MAX

**②**

Ø8,0 MAX

Ø4,5 MAX

Ø20

Ø25

**④**

OFF O

**⑤**

ON I

PZ2/1x5-7  
2,0 Nm MAX  
1x5  
PZ2

TKM 616U:  
Defeat mechanism  
Ohitusmekanismi  
Förbi koppling

SK

TK

VV